



**OPERATION MANUAL  
SPORT WATCH WITH ALARM CHRONOGRAPH  
1/100 SEC. LAP AND SPLIT CONTROL**

**FEATURES**

- 1) HOUR MINUTE. SEC & DAY OFF THE WEEK.
- 2) MONTH & DATE.
- 3) CHRONOGRAPH 1/100 SEC WITH LAP/SPLIT CONTROL.
- 4) 4 YEAR CALENDAR.
- 5) MELOEDY ALARM WITH CHIME AND SNOOZE.
- 6) 30SEC CORRECTION FOR SYNCHRONIZATION.
- 7) 12/24 HOUR DISPLAY FOR USER'S OPTION.
- 8) MAXIMUM COUNTING: 23 HRS 59 MINS 59 SECS.

**SWITCH CONTROL**

**NORMAL READOUT:**

- 1) DEPRESS S1 ONCE : MONTH, DATE AND DAY OF WEEK.
- 2) DEPRESS S2 ONCE : ALARM TIME.
- 3) DEPRESS S3 ONCE : CHRONOGRAPH FUNCTION.
- 4) BACK LIGHT

**SETTING SEQUENCE**

**A) NORMAL TIME SETTING**

- 1) PRESS S3 3 TIMES TO GET NORMAL TIME SETTING MODE, "SEC" WILL START FLASHING PRESS S1 FOR SYNCHRONIZATION.
- 2) DEPRESS S2 ONCE : "MIN" FLASHING. PRESS S1 TO ADVANCE.
- 3) DEPRESS S2 ONCE: "HOUR" FLASHING. PRESS S1 TO ADVANCE. ("A" IS AM) ("P" IS PM) ("H" IS 24 HR FORMAT).
- 4) DEPRESS S2 ONCE: "DATE" FLASHING. PRESS S1 TO ADVANCE.
- 5) DEPRESS S2 ONCE: "MONTH" FLASHING. PRESS S1 TO ADVANCE.
- 6) DEPRESS S2 ONCE: "DAY OF WEEK" FLASHING. PRESS S1 TO ADVANCE.
- 7) DEPRESS S3 ONCE : SETTING COMPLETED. RETURN TO NORMAL TIME READOUT.

**B) ALARM TIME SETTING.**

- 1) DEPRESS S3 TWICE. ALARM TIME "HOUR" FLASHING. PRESS S1 TO ADVANCE.
- 2) DEPRESS S2 ONCE. ALARM TIME "MIN." FLASHING. PRESS S1 TO ADVANCE.
- 3) DEPRESS S3 ONCE. SETTING COMPLETED. RETURN TO NORMAL TIME READOUT.

**C) ALARM FUNCTION.**

- 1) ALARM ARMED BY PRESS S1 AND S2 SIMULTANEOUSLY "🔔" FLAG WILL APPEARED.
- 2) DISARMED ALARM BY PRESS S1 AND S2 SIMULTANEOUSLY "🔔" FLAG WILL DISAPPEARED.

THE ALARM WILL STOP ITSELF AFTER 20 SEC OR CAN BE SILENCED BY PRESSING S1. IN EITHER CASE. THE ALARM WILL SOUND AGAIN SAME TIME OF THE NEXT DAY.

## CHIME

- 1) CHIME ACTIVATED BY PRESS S2 AND S3 SIMULTANEOUSLY. ALL DAY FLAG SHOWS UP.
- 2) DEACTIVATED CHIME BY. PRESS S2 AND S3 SIMULTANEOUSLY. ALL DAY FLAG DISAPPEARED.

## E) CHRONOGRAPH

PRESS S3 ONCE TO GET INTO "CHRONO" MODE S1 CAN NOW BE OPERATED TO START OR ANY COUNTING. EVENT. DURING A COUNTING. PRESS OF S2 WILL ENTER THE WATCH INTO LAP TIME MODE MEANING 1 PORTION OF THE COUNTING IS REGISTERED ON THE DISPLAY WHILE THE COUNTING CONTINUES UNTIL COMPLETED BY/PRESS OF S1 THEN PRESS OF S2 TWICE.

## F) SNOOZE FUNCTION

WHEN ALARM 'BEEP BEEP' OR 'SONG' IS ON DEPRESS OF S1 ONCE WILL ENTER THE WATCH INTO SNOOZE FUNCTION IT MEANS THE ALARM WILL SOUND AGAIN AFTER 5 MINUTES UNLESS IT IS DISABLED BY PRESS S2 ONCE.

## G) BATTERY

FOR REPLACEMENT USE LR1130, L1131, AG10 OR EQUIVALENT.